



1830
BEHRMAN (Fig. 1)



1831
BLACK (Fig. 1-2)



1834
Hollenback No.1 Plugger



1832
MORQUETTE (Fig. 0/1)



1835
Hollenback No. 2 Plugger



1833
Black Action 11/12 Plugger




1836
Hollenback No. 3 Plugger




1837
Blacks 0-1 (1mm-1.5mm)




1838
Blacks 1-2 (1.5mm-2.5mm)

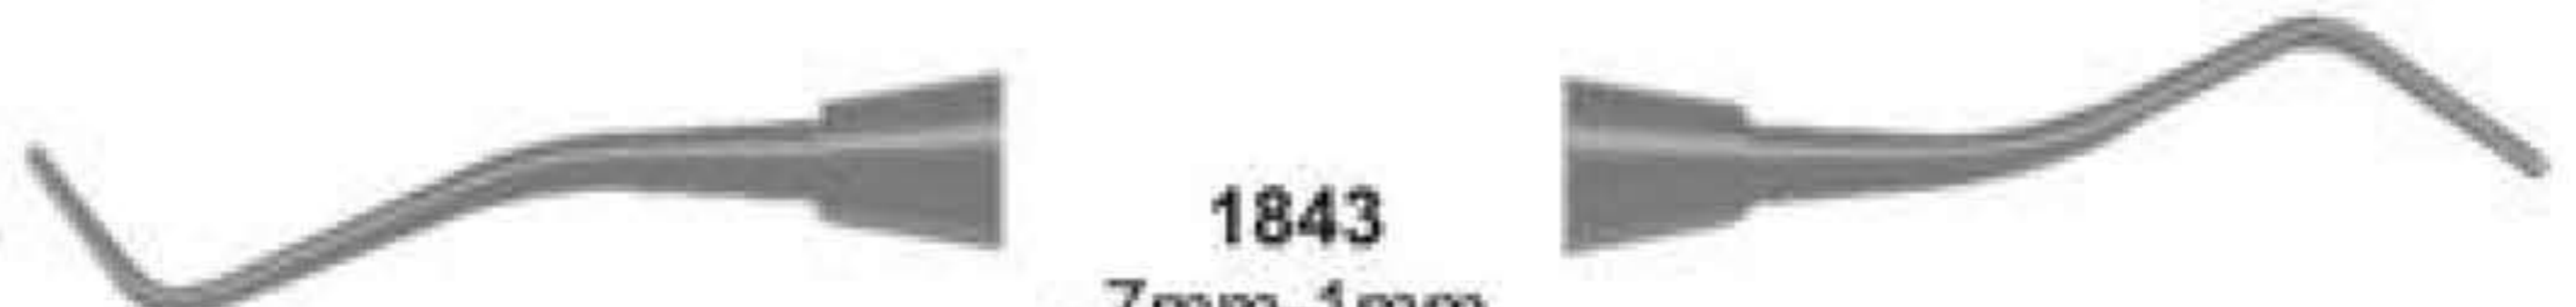

1843
.7mm-1mm

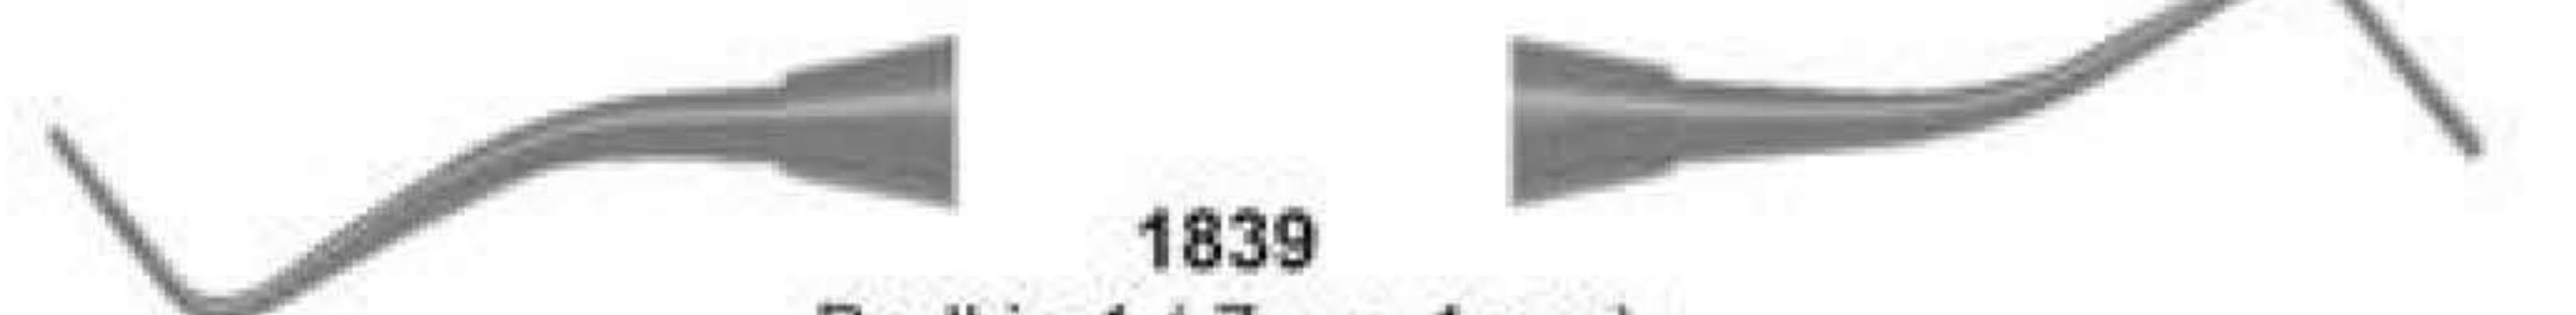


1839
Bodkin 1 (.7mm-1mm)

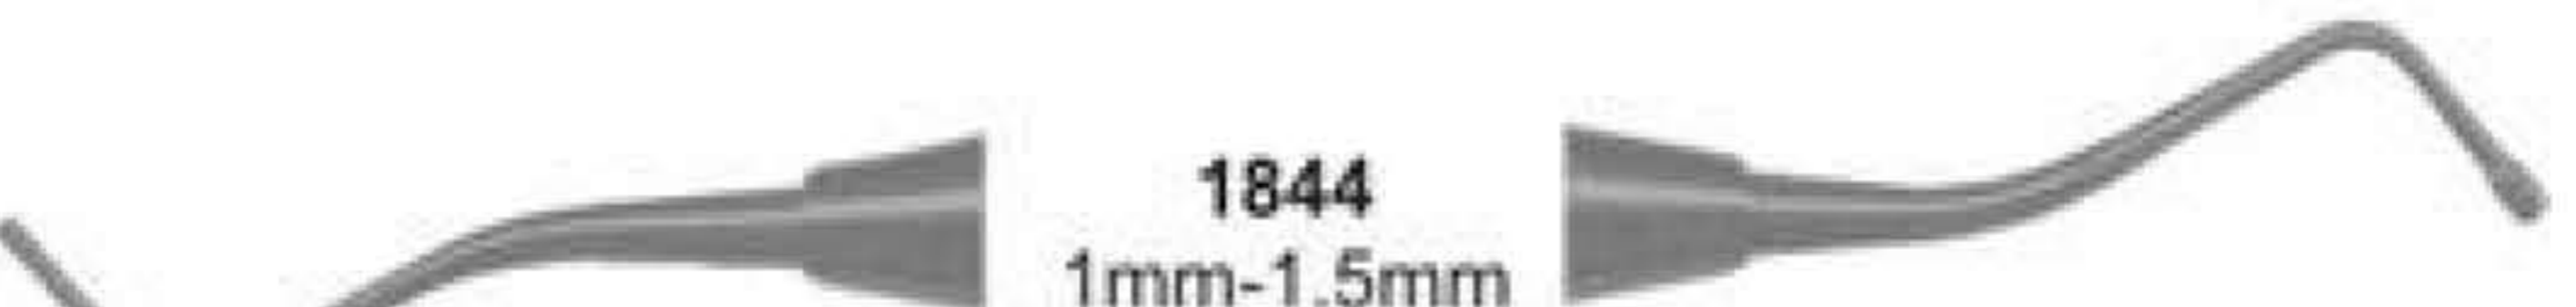


1844
1mm-1.5mm



1840
Bodkin 2 (1.5mm-2mm)

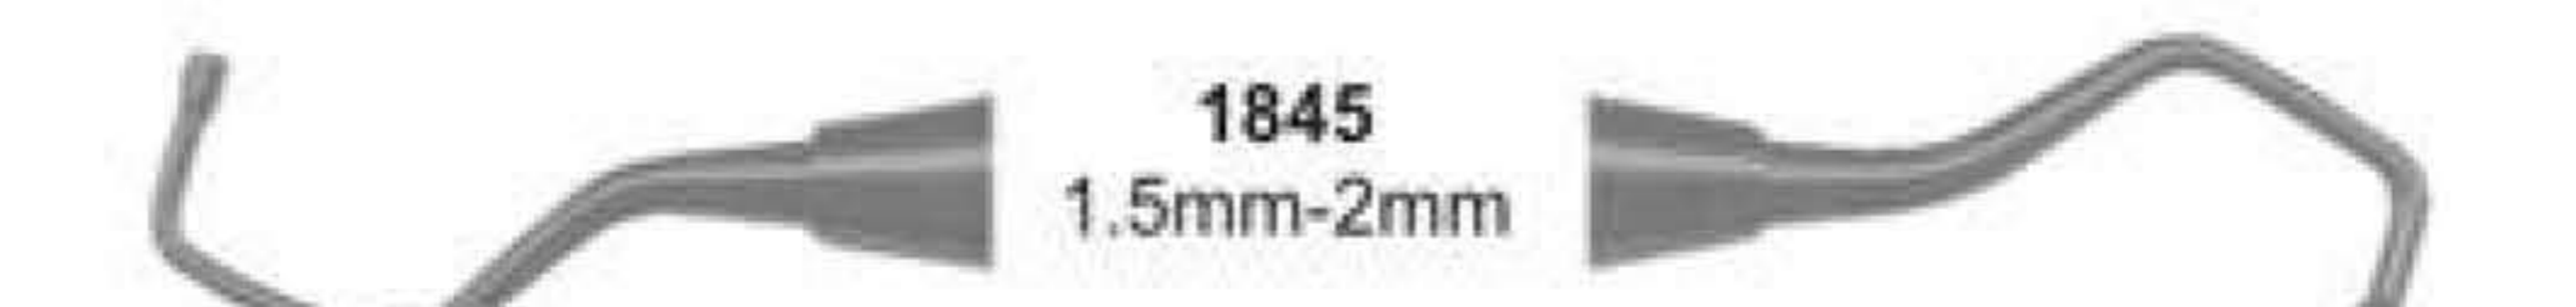


1845
1.5mm-2mm

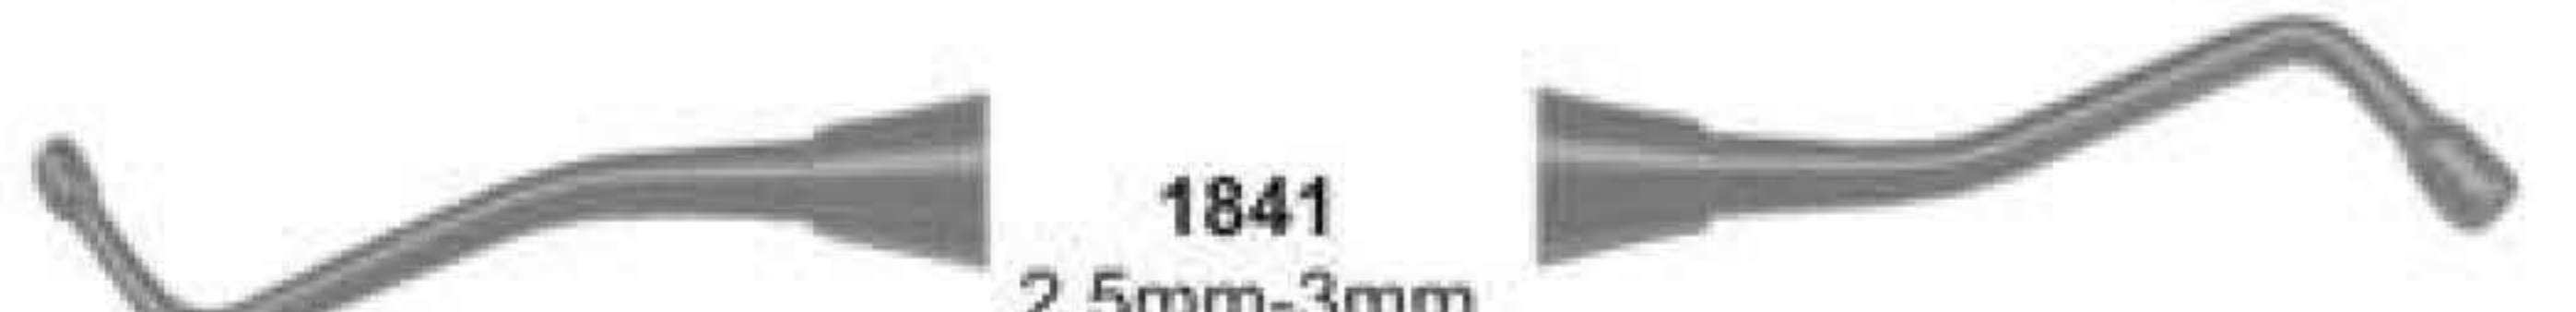

1841
2.5mm-3mm




1846
Oregon (Fig. 3)

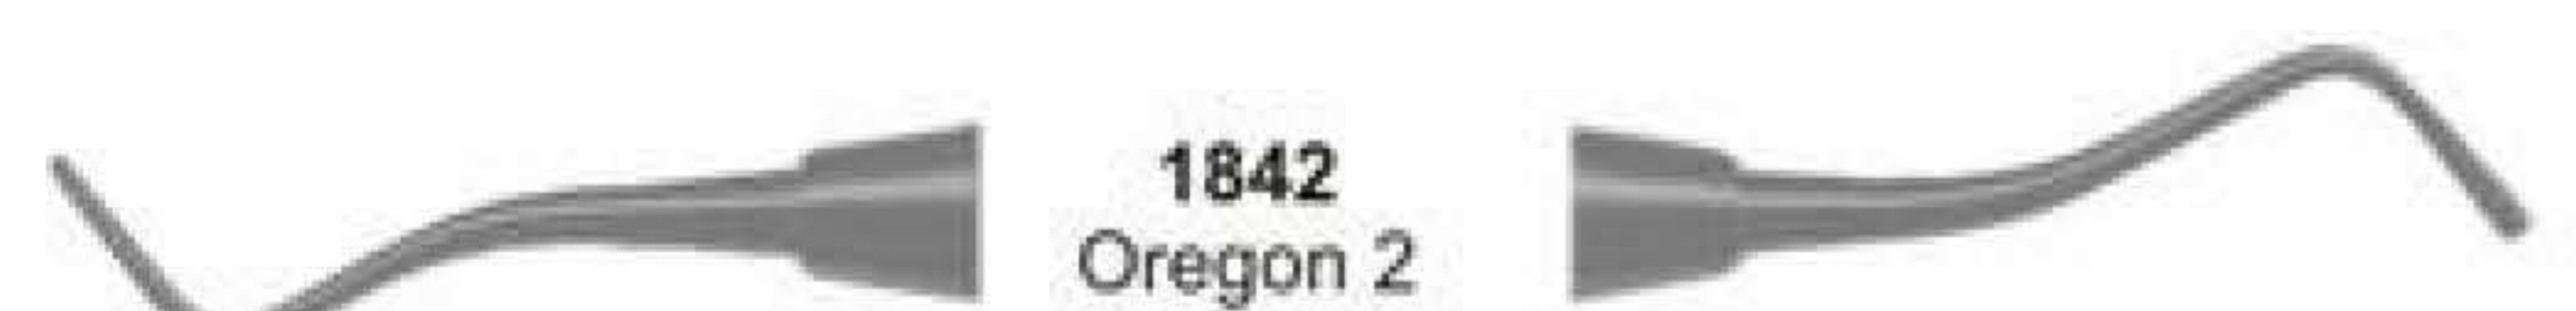


1842
Oregon 2




1847
Oregon (Fig. 4)

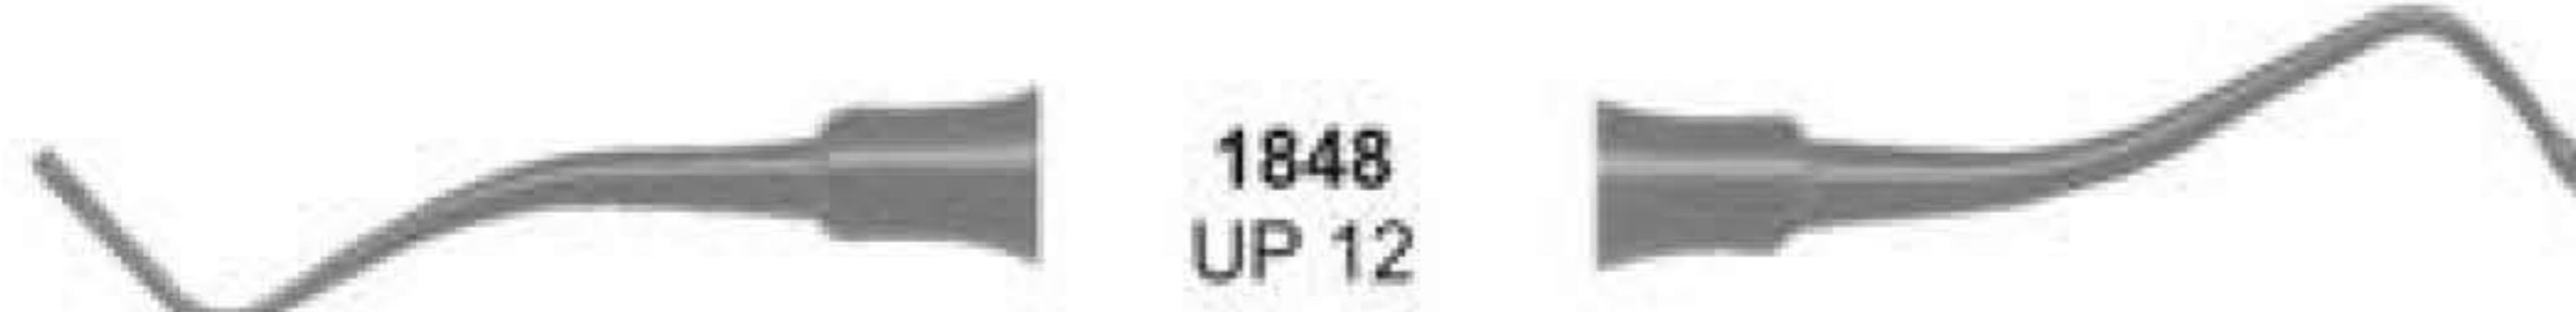


1848
UP 12

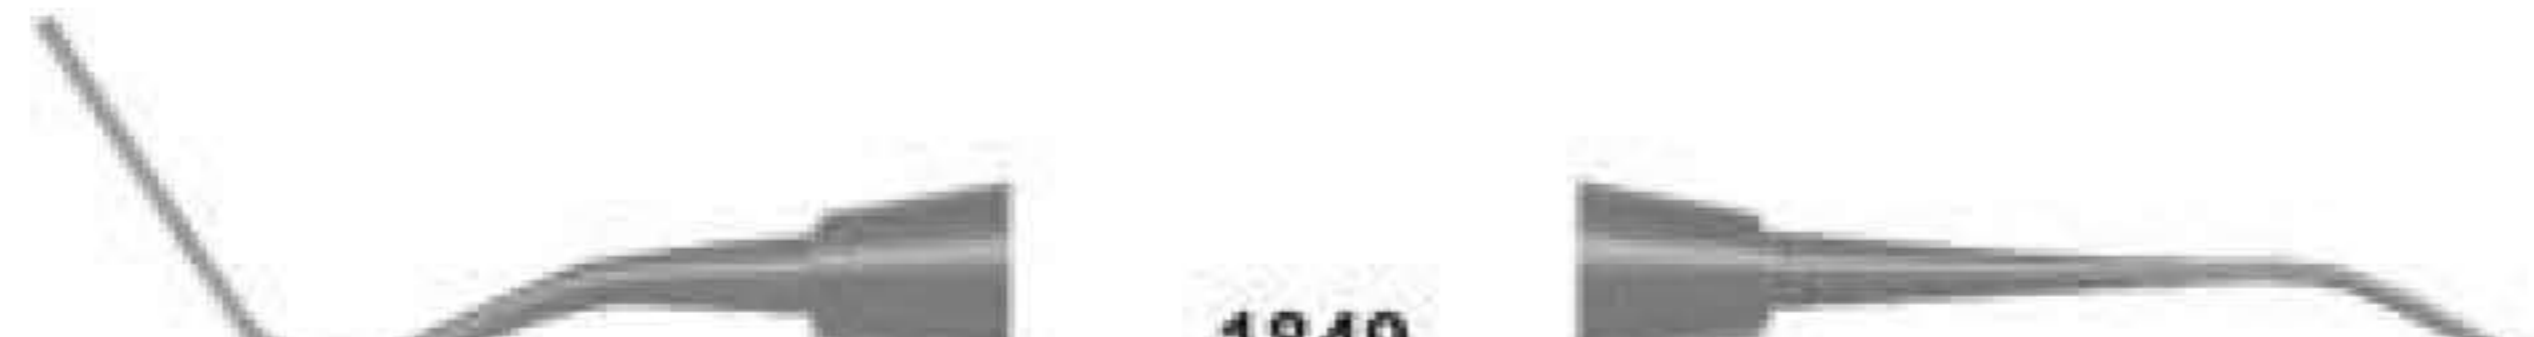

1849
Applicator 1-2


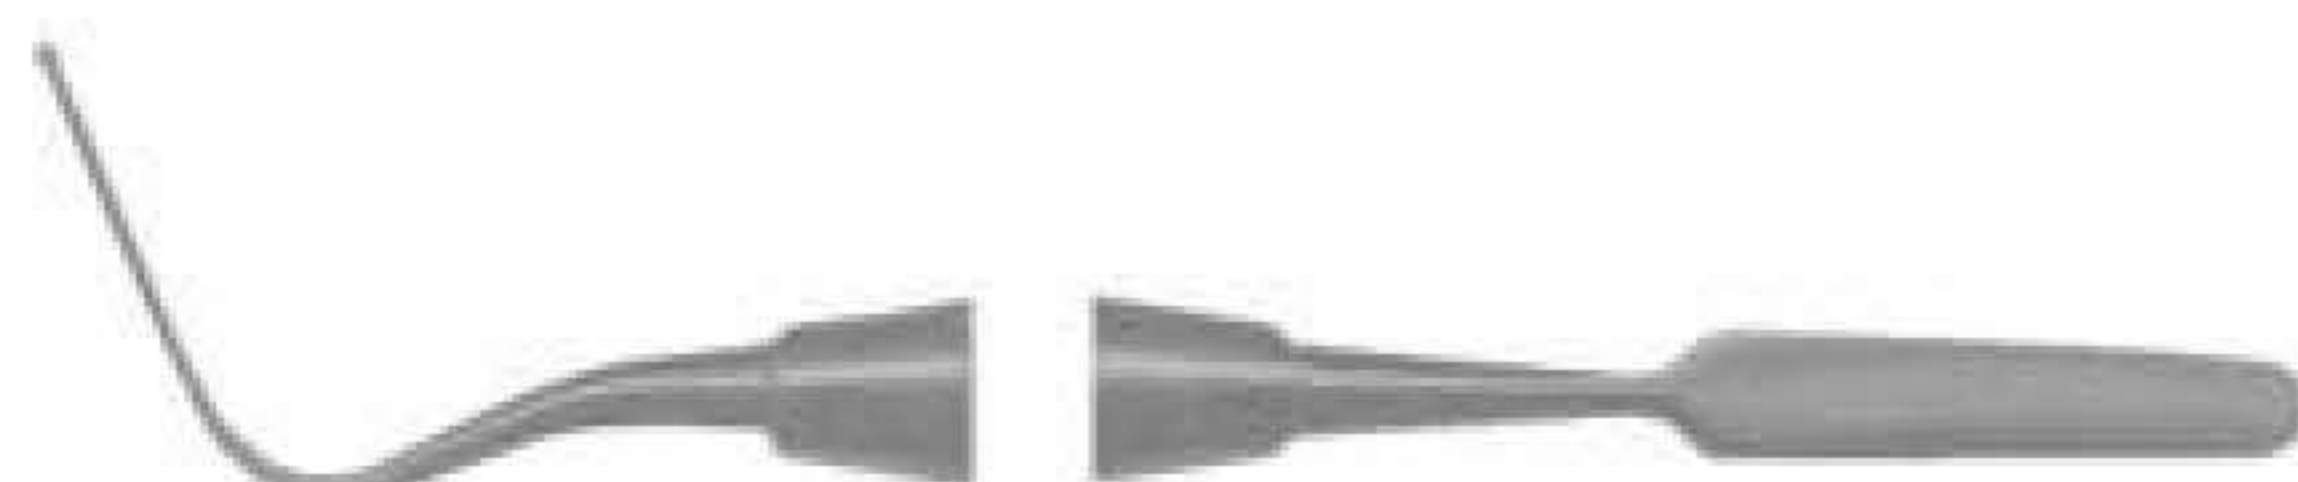


1850
Birtles Applicator Spatula


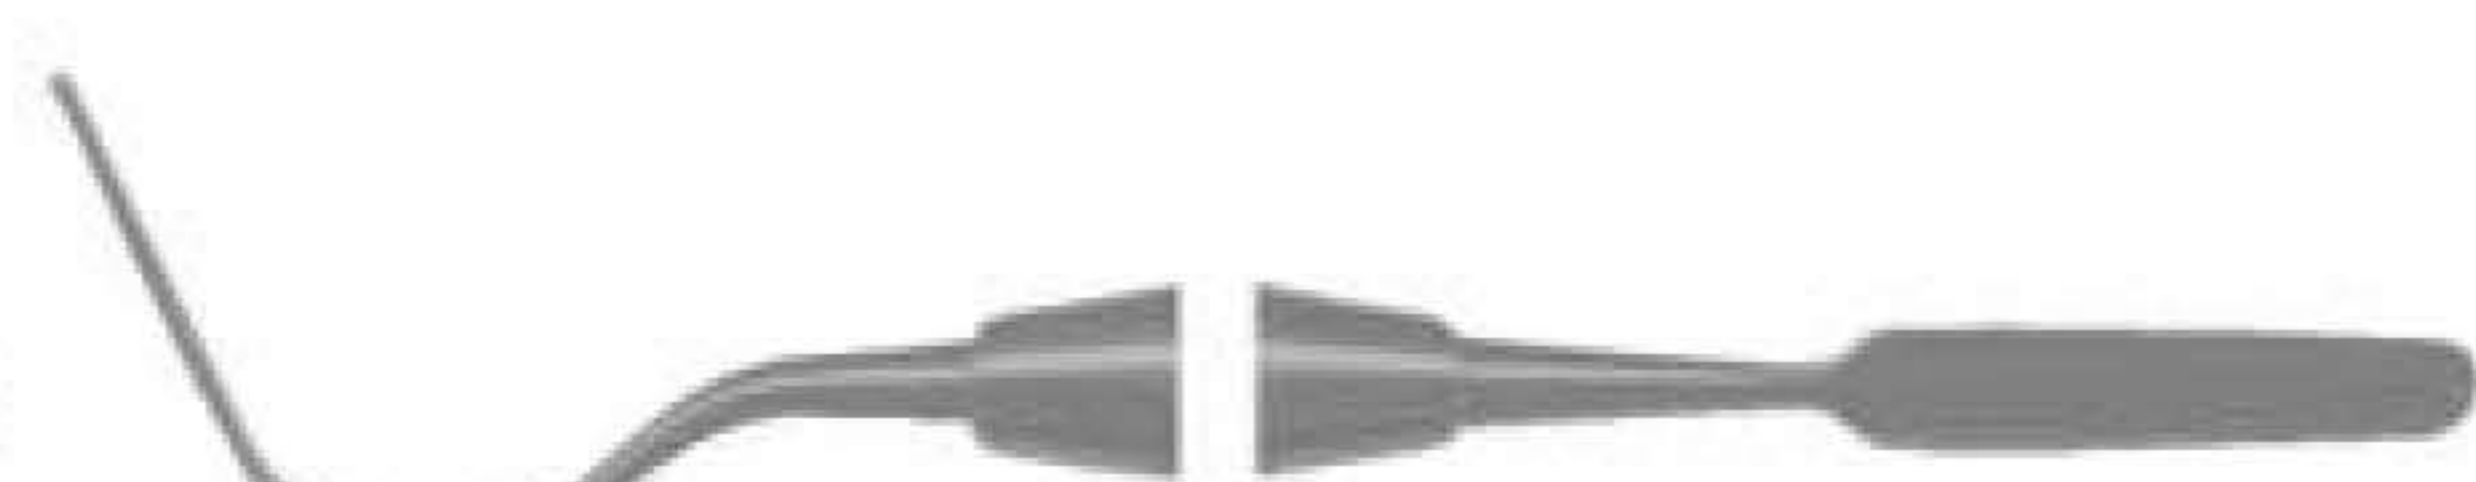


1851
Birtles Applicator Spatula K


Placement Instruments

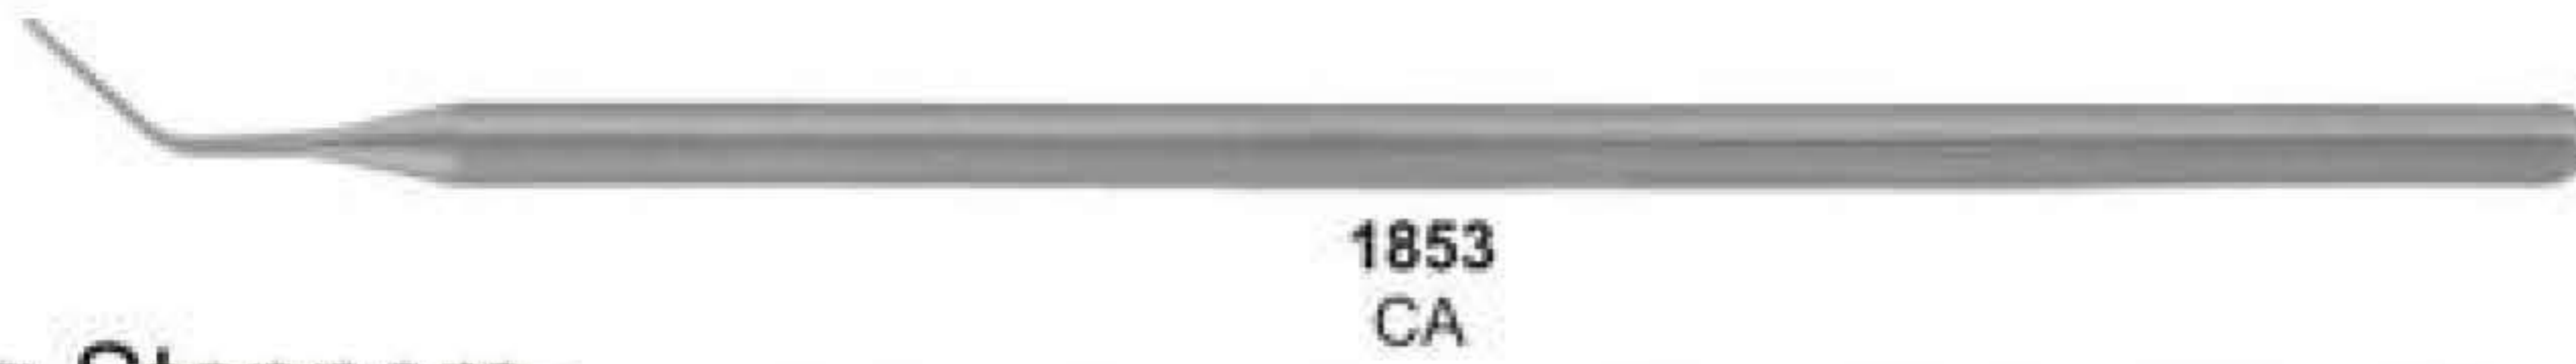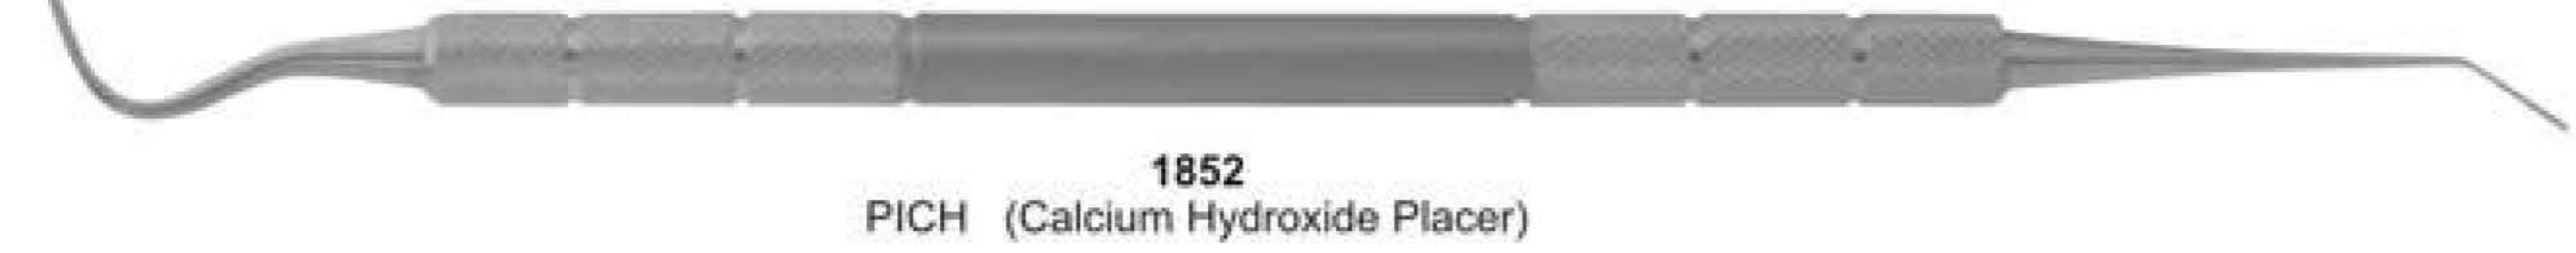


Stopping Stoppers

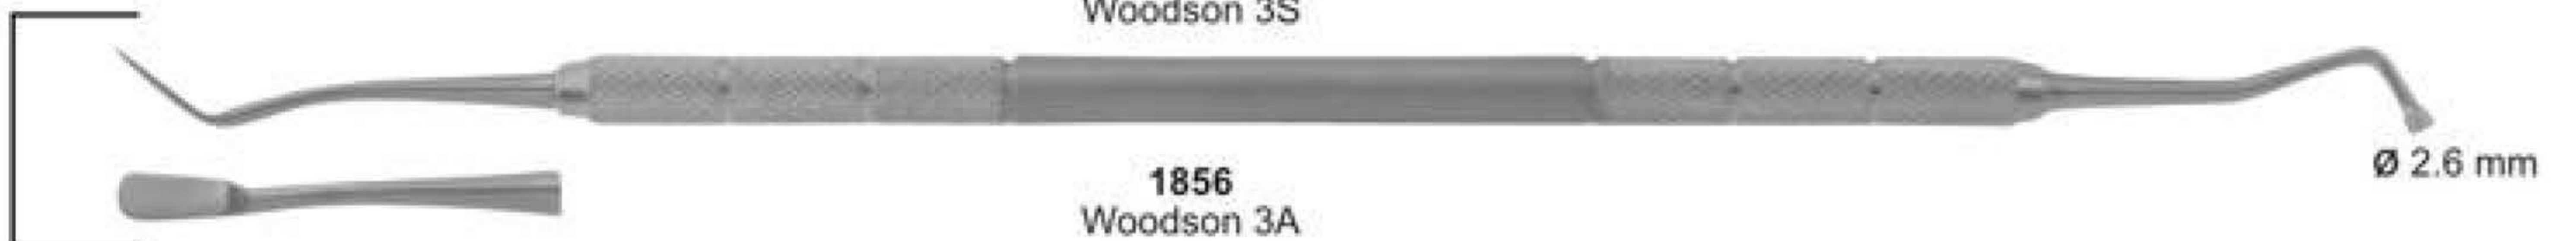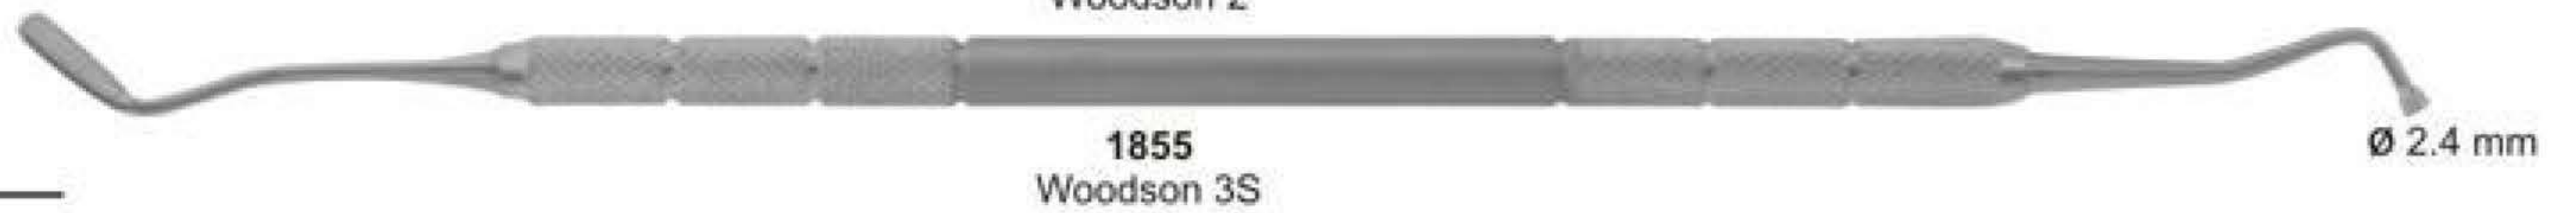

Pluggers

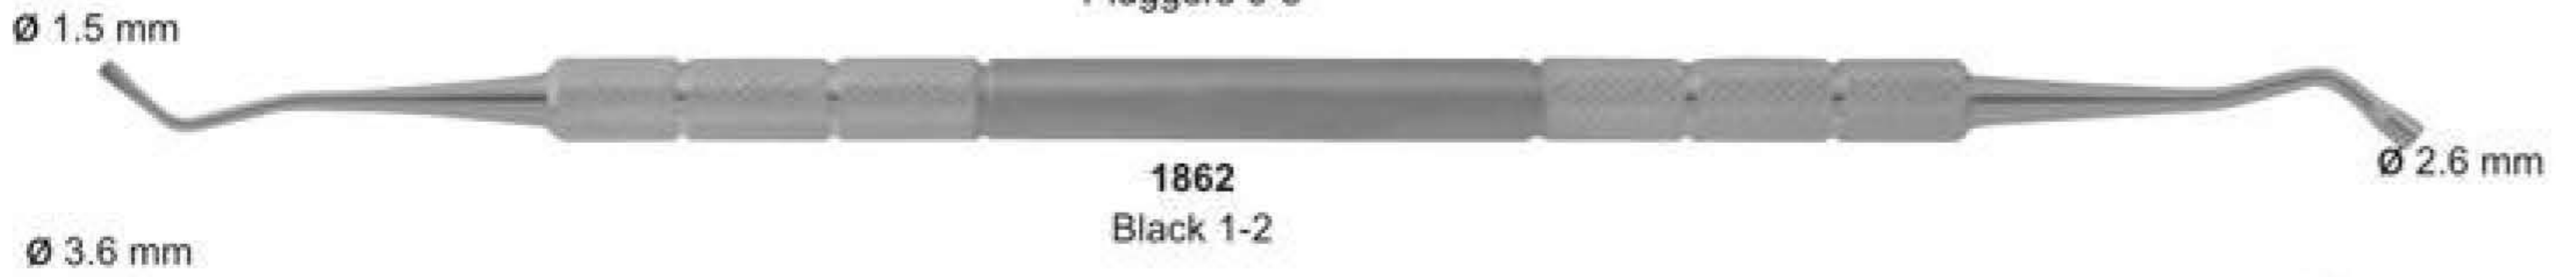


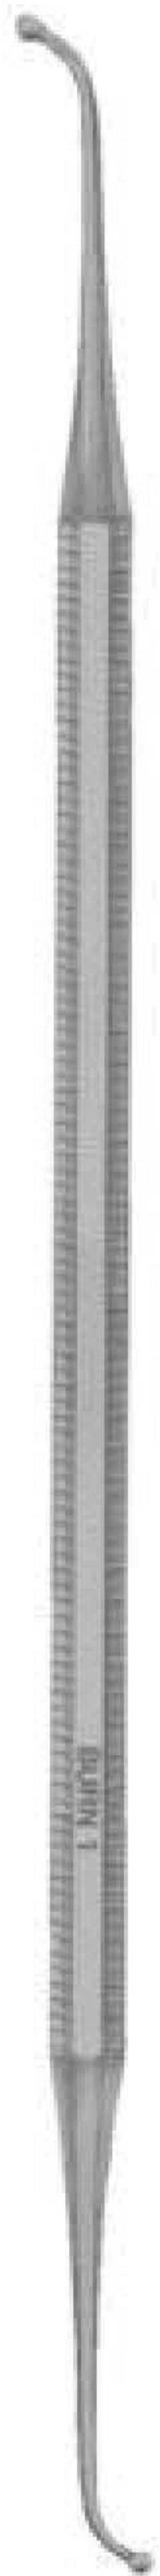


1864
Fig. 1




1865
Fig. 28/29

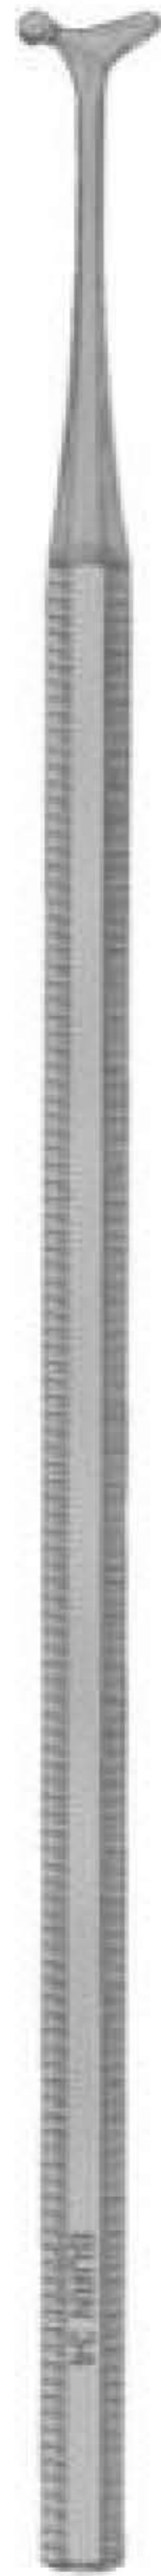


1866
Fig. 34

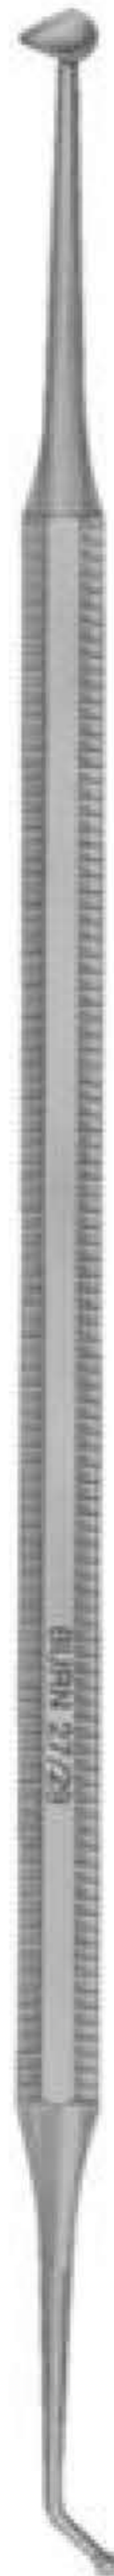

1867
Fig. 27/29

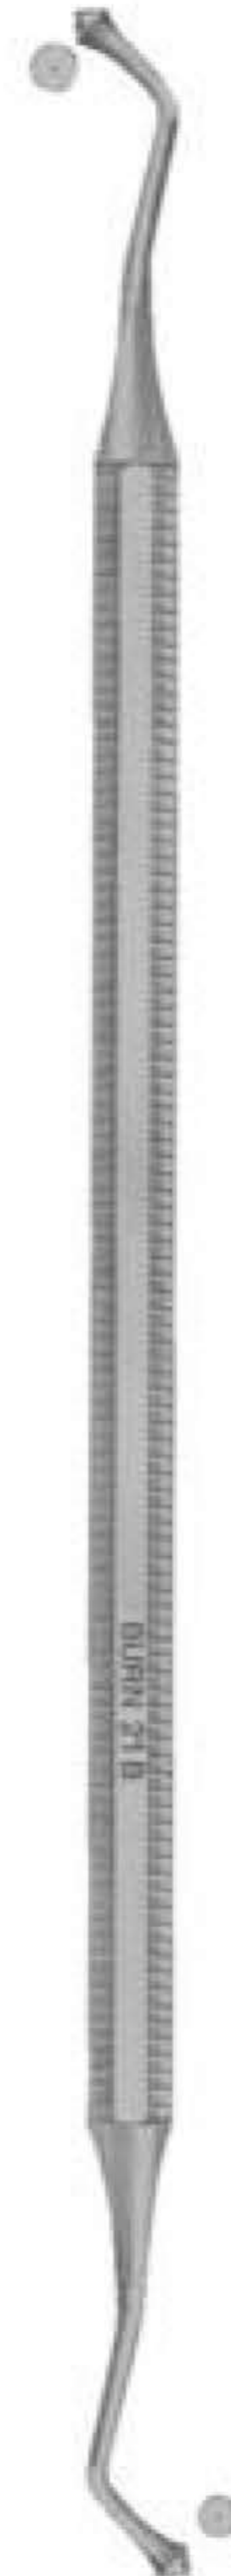

1868
Fig. 21B

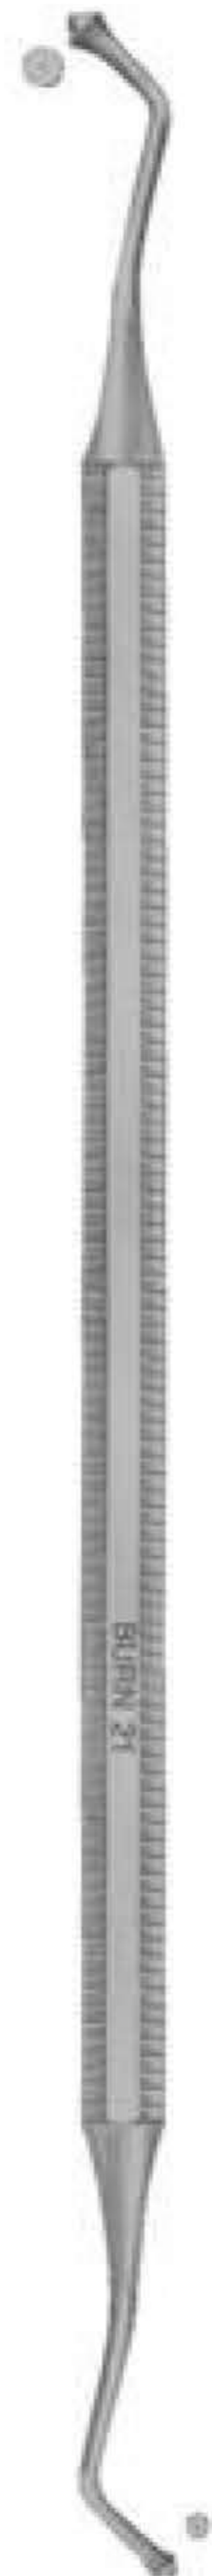

1869
ACORN
Fig. 21

